


# LG Aria Digital Key Telephone

## 8 Button Quick Reference User Guide (LDP-7008)

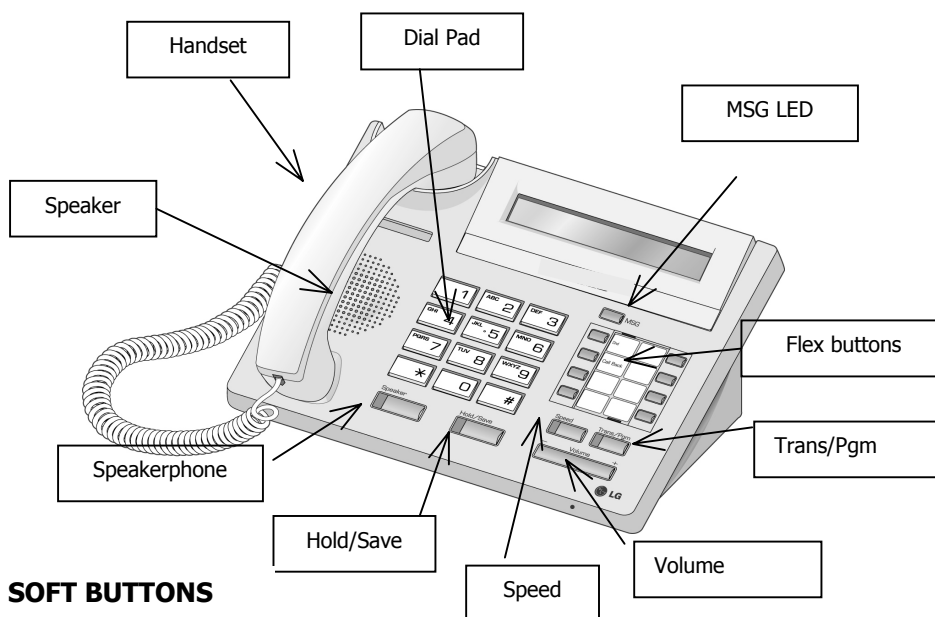

### FIXED FEATURE / SOFT BUTTONS

- **SPEED** button provides you with access to speed dialing, save number redial and last number redial.
- **TRANS/PGM** (TRANSFER) button is used to transfer an outside call from a station to another.
- **CALLBK** (CALLBACK) button allows you to leave a callback indication at a station that is busy, unattended, or in Do Not Disturb.
- **DND/FWD** (Do Not Disturb/Forward) button allows you to forward your calls to another destination, or make DND mode.
- **VOLUME** ▲ bar allows you to adjust speakerphone and handset volume.
- **SPEAKER** button enables you to make a phone call without lifting handset. It turns the telephone on and off when using the speakerphone.
- **HOLD** button enables you to place an outside caller on hold.
- **PROGRAM FLEXIBLE BUTTONS** Press "TRANS/PGM", press programmable flexible button, Dial "extension number or number below", press "HOLD/SAVE", press programmable flexible button
  - To Program CONF button "91"
  - To Program CALL BACK button "92"
  - To Program REDIAL button "97"
  - To Program DND/FWD button "93"
  - To Program MUTE button "95"

FEATURES	
<b>MAKE AN INTERNAL CALL</b>	Dial the extension number Ie. "102"
<b>SELECT A LINE</b>	Dial "0"
<b>DIAL THE ATTENDANT</b>	Dial "9"
<b>TRANSFER A CALL</b>	"TRANS/PGM" Ext.No. Hang-up or wait for an answer then hang-up. Or press the DSS button Hang-up (DSS=direct station selection)
<b>CALL PARKING</b>	Dial "TRANS/PGM" 601-619 ( <b>RETRIEVE CALL:</b> dial 601-619) <b>Note:</b> Most features can be accessed via the menu. Press "TRANS/PGM" scroll up & down by the volume keys. Make your selection by pressing the relevant digits
<b>BGM</b> (Back Ground Music)	"TRANS/PGM" 73 (channel 01-12, 00 to cancel) "Hold/Save"
<b>CALL BACK</b>	"CALLBACK" (call-back a busy or no answer extension.)
<b>CALL FORWARD</b>	Dial 554 1=fwd all, 2=busy, 3=no ans, 4=busy/no ans, 5=off-net, 6= off-net no ans, 0=follow me (add # for VMIB)
<b>CANCEL FORWARD</b>	554 #
<b>CHANGE INTERCOM MODE</b>	"TRANS/PGM" "12" 1=Hands free, 2=Tone ring, 3=Private mode SAVE
<b>CHANGE RING TONE</b>	"TRANS/PGM" "11" 1-4 HOLD/SAVE.
<b>HEADSET MODE</b>	"TRANS/PGM" "75" 1:Speaker 0:Headset "HOLD/SAVE"
<b>PAGEALL</b>	#00 <b>INTERNAL:</b> dial #5 <b>EXTERNAL:</b> dial #9
<b>PICKUP</b>	** Direct Pickup: *7 Ext.No
<b>PROGRAM DSS KEYS</b>	"TRANS/PGM" DSS (flex buttons) dial code or Ext.no. "HOLD/SAVE"
<b>LAST NUMBER REDIAL</b>	Press "SPEED" "*" "

